



# Important Safety Information

To prevent the risk of harm to the user or damage to equipment, please read this information before installing or repairing the phone.

-  **Warning** This means danger. It means that the action could cause bodily injury or death.
-  **Caution** Misuse may cause personal injury or equipment damage.
- After reading this manual, please store it near the phone so others may easily refer to it.

## Warning



Only trained and qualified service personnel should install, replace or service the phone.



Do not spill liquid (ex., water) on the phone. In case of spill, contact your service technician for assistance to avoid fire or electric shock.



If you see smoke or smell something burning, unplug the power cord and the phone line. Call your service technician for assistance.



Do not use the phone during a thunderstorm. Lightning strike may result in a fire, severe electrical or acoustic shock.



Do not tug the power cord or the phone line. This may result in a fire, an electric shock or equipment damage.

# Important Safety Information

..... ⚠ Caution .....



Ensure that children do not pull on phone cords. This may injure children or result in equipment damage.



The ear-piece houses a magnetic device which may attract pins or small metal objects. Keep handset clear of such objects and check before use.



Avoid placing the phone in an area that is dusty, damp or subject to vibration.



Choose a site that is dry and well ventilated.



Do not put the heavy things on the phone.



Do not drop or throw the phone.



Static electricity discharge will damage electronic components.



Keep out of direct sunlight and away from heat.

# Important Safety Information

..... ⚠ Caution .....



Clean the phone with a soft, dry cloth only. Do not use volatile liquids such as petrol, alcohol or acetone as this may cause a fire or result in discoloration or damage to plastics. Do not clean with wax or silicon products as these may enter the equipment and cause operation to become unreliable.



No user serviceable parts inside. Do not insert a screw driver or any metal objects into the phone. This may cause electric shock or damage the equipment and will render the warranty void.

---

# LDP-7208D Model

LDP-7208D is an advanced, user-friendly digital keyset, offering the convenience of flexible and pre-programmed buttons for quick access to commonly used functions.




- Features

- Trendy and stylish LDP Family product design
- LCD interface
- Easy to use features
- Wall mountable (bracket not included - optional)

# Input/Output Devices and Button Description

## LDP-7208D

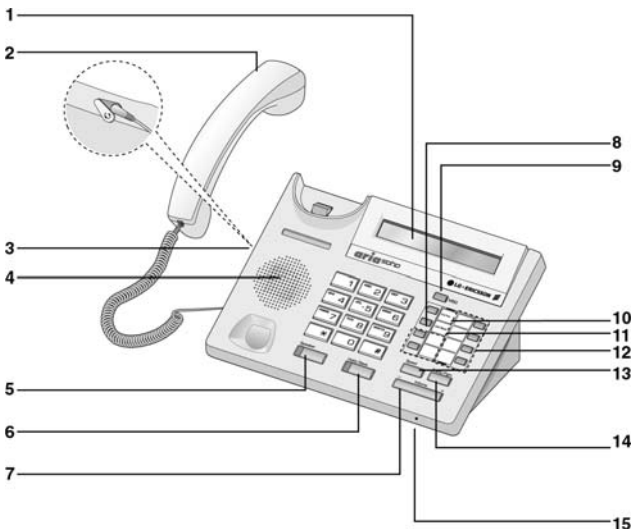

### Item

### Description

#### 1 LCD Display

Shows incoming caller info., status, and menus.

#### 2 Handset

Transmits outgoing and incoming sound.

#### 3 Headphone Socket (Ear/Mic)

Install an optional earphone for hands-free conversation.

#### 4 Speaker

Outputs tones and voice.

#### 5 Speaker Button


Toggles speaker-phone status; red LED is illuminated when the speakerphone is ON.

## Input/Output Devices and Button Description

Item	Description
<b>6 Hold/Save Button</b>	Places a call on hold or saves programming information.
<b>7 Volume</b>	Adjusts audio to desired level.
<b>8 Loop</b>	Receive calls where no CO Line appearance is available.
<b>9 MSG LED</b>	Illuminates if MSG is waiting.
<b>10 DND/Fwd Button</b>	Blocks all incoming calls; red LED is illuminated when ON. Forwards calls (ex., to another station or voicemail); the red LED flashes when active.
<b>11 Call Back</b>	When calling a busy station to request a return call when idle.
<b>12 Flex</b>	Program features to a button.
<b>13 Speed</b>	Speed dial and program, and saved number redial access.
<b>15 TRANS/ PGM</b>	Used to initiate a call transfer (TRS) or to enter programming mode (PGM).
<b>16 Handsfree</b>	Microphone for Handsfree phone operation.

## Cable Connection

The diagram (shown) depicts cable connections for the LDP-7208D; connection points are described below.

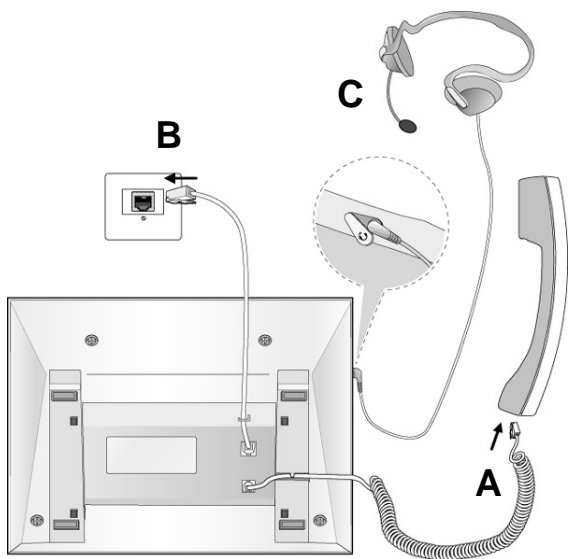

**A** Connect the telephone cord (spiral cord) to the handset and the other end to the handset jack at the bottom of the telephone.

**B** Connect the line cable to the port at the bottom of telephone and the other end to the wall socket.

**C** Connect the Headphone to the headphone jack on the left side of the telephone (when viewed from the front).

---

# Basic Function

## Placing an Outside Call

- Lift handset or press the Speaker button (also may dial without pressing Speaker or lifting handset).
- Dial **9** on keypad.
- Dial the desired number.

## Placing an Intercom Call

- Lift handset or press the Speaker button (also may dial without pressing Speaker or lifting handset).
- Dial the station number using the keypad.

## Placing an Outside Call on Hold

- While connected to an external call, press the [HOLD] button.

## Retrieving a Outside Call on Hold

- Press the flashing flexible button.
- ※ **NOTE:** calls will automatically recall after the pre-set time.

## Answering a Waiting Call

- Press the flashing CO button.

## Camp-on at a Busy Station

- After receiving a busy tone when calling a Station, press the \* key; the Camp-on tone is heard at the called station.
- When the called party answers, complete call as initiated.

## Call Transfer

- Press [TRANS/PGM] button and dial the appropriate Station to transfer the call to.
- When the called party answers, talk, or hang up to complete transferred call to the called party.



# Basic Function

## Last Number Redial

- Lift handset, or press the Speaker button (also may dial without pressing Speaker or lifting handset).
- Dial **5 5 2** or press the speed button + dial ' \* ' + Hold/Save button.

## Storing Station Speed Dial Numbers

- Press the [TRANS/PGM] and [SPEED] Buttons.
- Dial speed bin number (range=000-099).
- Enter the desired speed dial number to store.
- Press the [HOLD/SAVE] button.
- Enter the name associated to the number (refer to [Character Entry chart](#)).
- Press the [HOLD/SAVE] button; a confirmation tone will be heard.

## Using Station Speed Dial Numbers

- Press the [SPEED] button.
- Dial the desired speed dial bin number.

## Accessing an Incoming Call to Another Station (Call Pick-up)

When you hear another phone ringing in your area:

- Lift handset, or press the Speaker button (also may dial without pressing Speaker or lifting handset).
- Dial **7**.
- Dial the extension number of the ringing station; you will be connected automatically to the caller.

## Group Call Pick-up

When hearing an unattended phone ringing in your area:


- Lift the handset.
- Dial **5 6 6**; the call will be connected automatically.
- ※ **NOTE:** you must be in the same pick-up group as the ringing phone.

# Code for Flexible Button Programming


## Registering Flexible Buttons

- 1**

**Trans/Pgm**




Press the [Trans/Pgm] button.
- 2**




Press the desired [Flexible] button.
- 3**

**Trans/Pgm**




Press the [Trans/Pgm] button.
- 4**



Enter code number (refer to list next page).
- 5**

**Hold/Save**



Press the [Hold/Save] button.

# Code for Flexible Button Programming

## Button Assignment for LDP- 7208D

Code	Function
11	Differential Ring
12	Intercom Answer Mode (1HF, 2TONE, 3PV)
13	SMS Message Display
14	Enblock Mode
15	SMS/Notice Display
16	Scroll Speed
17	Ear/Mic Headset
18	ICM Bell
19	CO Bell
1#	PTT Group
21	Station COS Down
22	Station COS Restore
23	Walking COS
24	COS Change
25	SMS INBOX
26	Delete All SMS Messages
31	Authorization Code Registration
32	Authorization Code Change
33	Registration Mobile Extension
34	Active Mobile Extension
35	Register Mobile Extension CLI
36	Active Mobile Hunt
37	MSG Wait Notice To Mobile Extension
41	Wake-up Time Registration (One-Time/Continuous)
42	Wake-up Time Cancel
43	Activate Conference Room
44	Deactivate Conference Room
451	Call Coverage Mode
452	Call Coverage Delay Ring Cycle
51	Pre-Selected MSG Activation
52	Set Custom Message
61	Record VMIB User Greeting
62	Play Time & Date
63	Play Station Number
64	Play Station Status
65	Record VMIB Page Message
66	Erase VMIB User Greeting
67	Erase VMIB Page Message
68	Outbound Notification Menu
69	Outbound Notify Number

## Button Assignment for LDP- 7208D (cont.)

Code	Function
60	E-Mail Notification
6*	Record User Name
6#	Erase User Name
71	LCD Display Mode (English/Domestic Language)
72	MPB Version Display
73	Background Music
74	Station User Name Registration
75	Headset/Speakerphone Mode
76	Headset Ring Mode
78	Serial No/SW Packages
79	PC – Phone Lock Key
**	Hot Desk Logout
*0	Hot Desk Login
*1	Relocation Out
*2	Relocation IN

## Entering characters

A  +

B  +

C  +

D  +

E  +

F  +

G  +

H  +

I  +

J  +

K  +

L  +

M  +

N  +

O  +

P  +

Q  +

R  +

S  +

T  +

U  +

V  +

W  +

X  +

Y  +

Z  +